



## New limit switch mounting for all LES - axes ... for improved serviceability

All LES - axes will be delivered with  
a **modified limit switch mounting** from the week 02/2014!

In case of a defective limit switch, there is no need to remove  
the spindle bearing (floating bearing side or fixed bearing side).

Necessary steps for removing the limit switch are:

1. loosen and take out the two cross slot screws (1)
2. pushing back the dissolved limit switch sheet towards the aluminium profile (2)
3. turning the sheet through 180°, so that the roller lever pointing downwards
4. carefully put out the limit switch mounting

The installation of the new limit switch is done in the reverse order!

