




Pos. 1
4 x RE 40 x 250W
L=1500

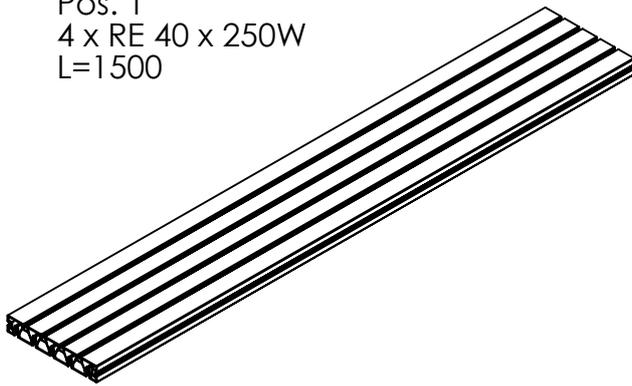


Pos. 2
2 x Seitenabd.
für RE 40 x 250W

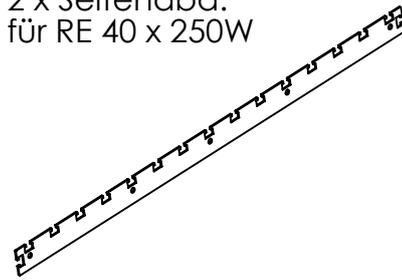


Pos. 3
4 x PS80
L=665

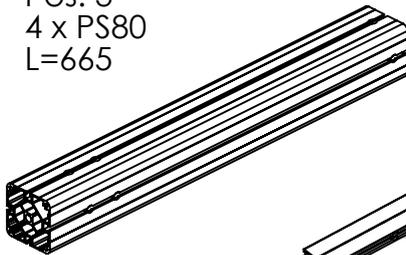


Pos. 4
2 x PP50
L=830

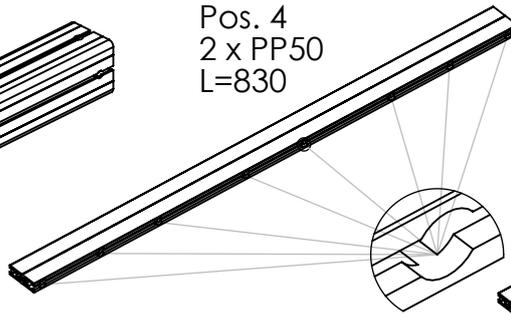


Pos. 5
2 x PP50
L=894

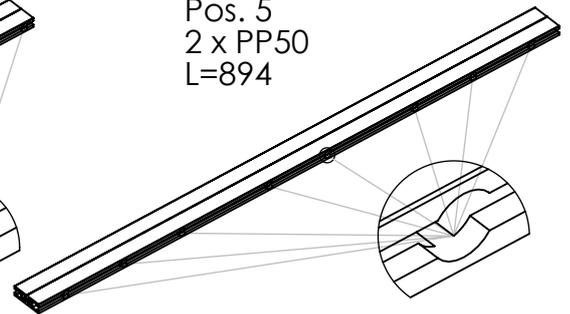


Pos. 6
2 x PP100
L=1300

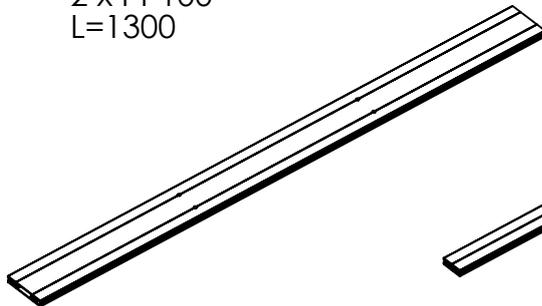


Pos. 7
2 x PP50
L=1300

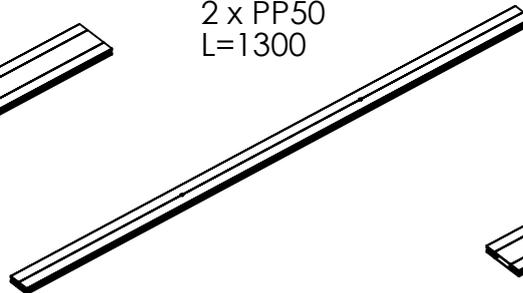


Pos. 8
2 x PP100
L=830

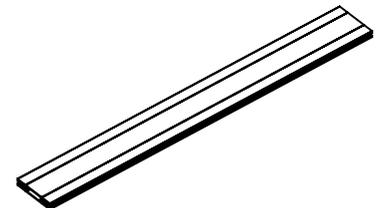


Pos. 9
8 x T - Nuten -
abdeckprofil
L=665

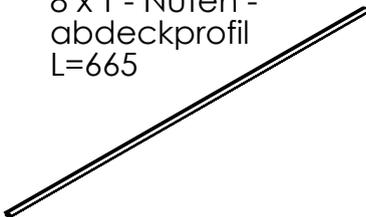


Pos. 10
4x Kunststoff-
fuß

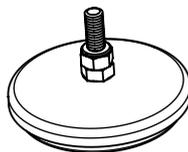


Pos. 11
32x DIN 508
M6



Pos. 12
32 x DIN 6912
M6 x 25

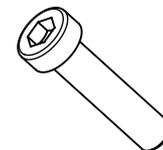


Pos. 13
24 x DIN 6912
M6 x 35

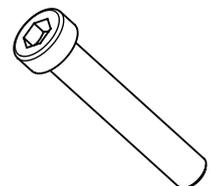

Pos. 14
16 x DIN 7380
M6 x 8



Pos. 15
4 x DIN 7380
M6 x 40

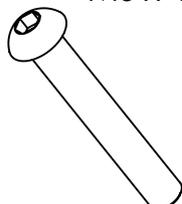

Pos. 16
4 x DIN 125
Ø 13




Pos. 17
4 x DIN 936 M 12




Montageanleitung
Arbeits Tisch AT3

Art. Nr. 248 550 0013


1

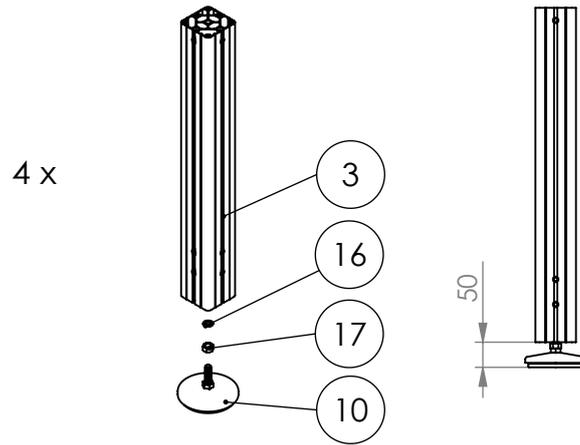


2

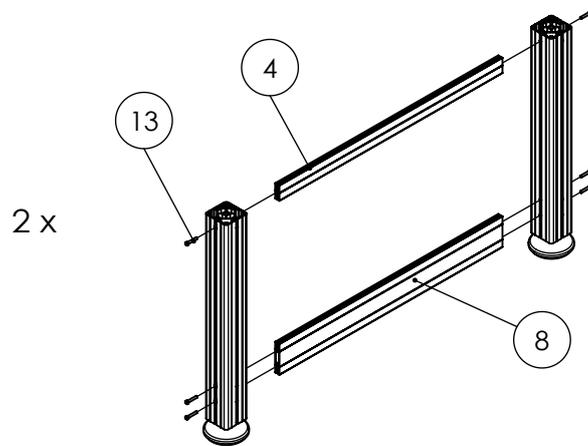


3

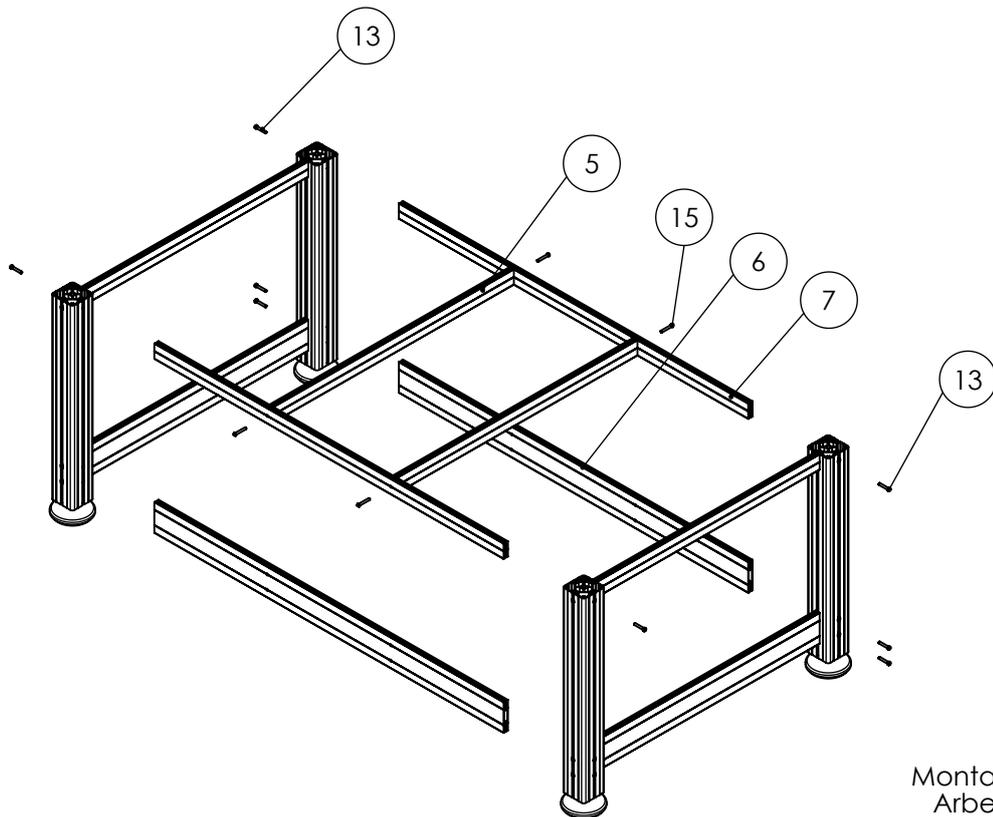


4

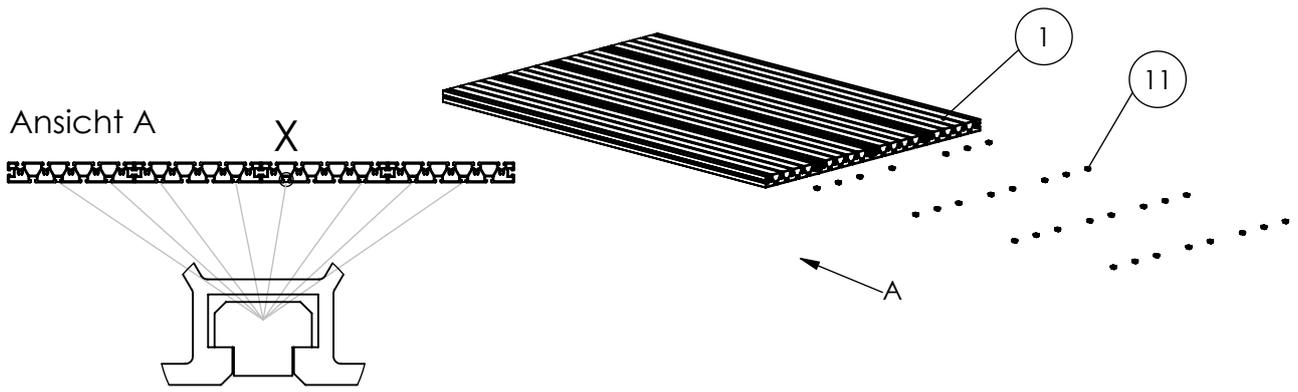


5

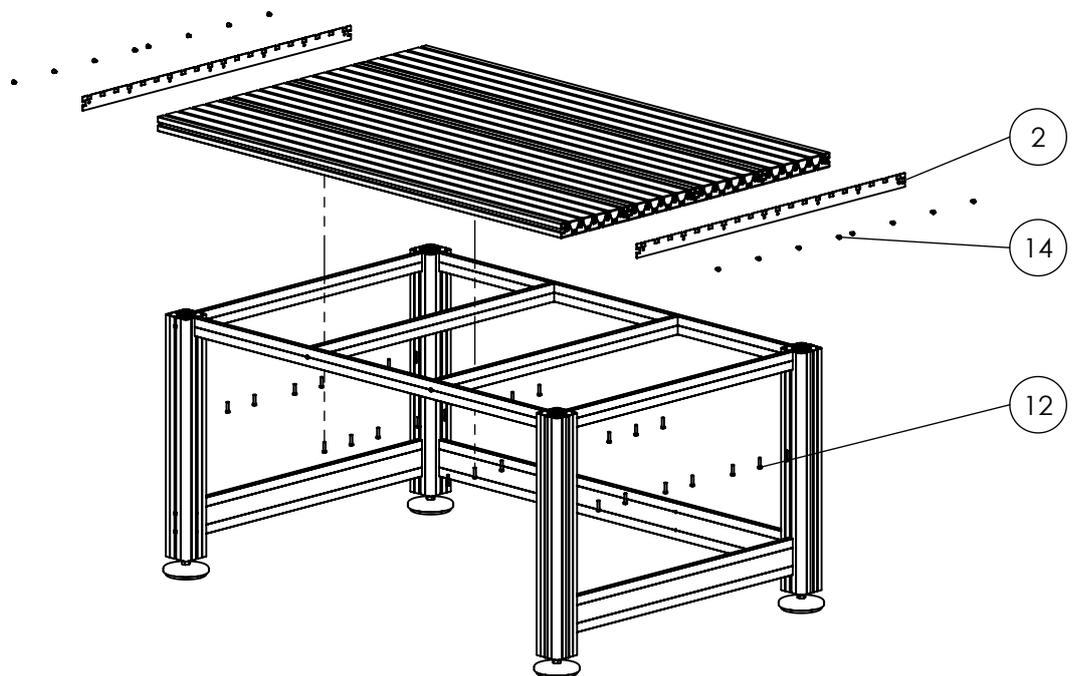


6

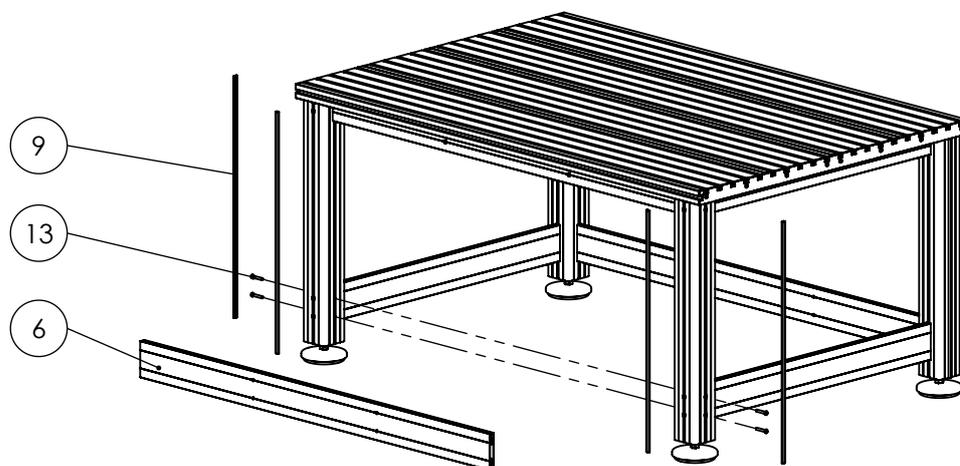


Option - Einlegeboden mit Profilstrebe

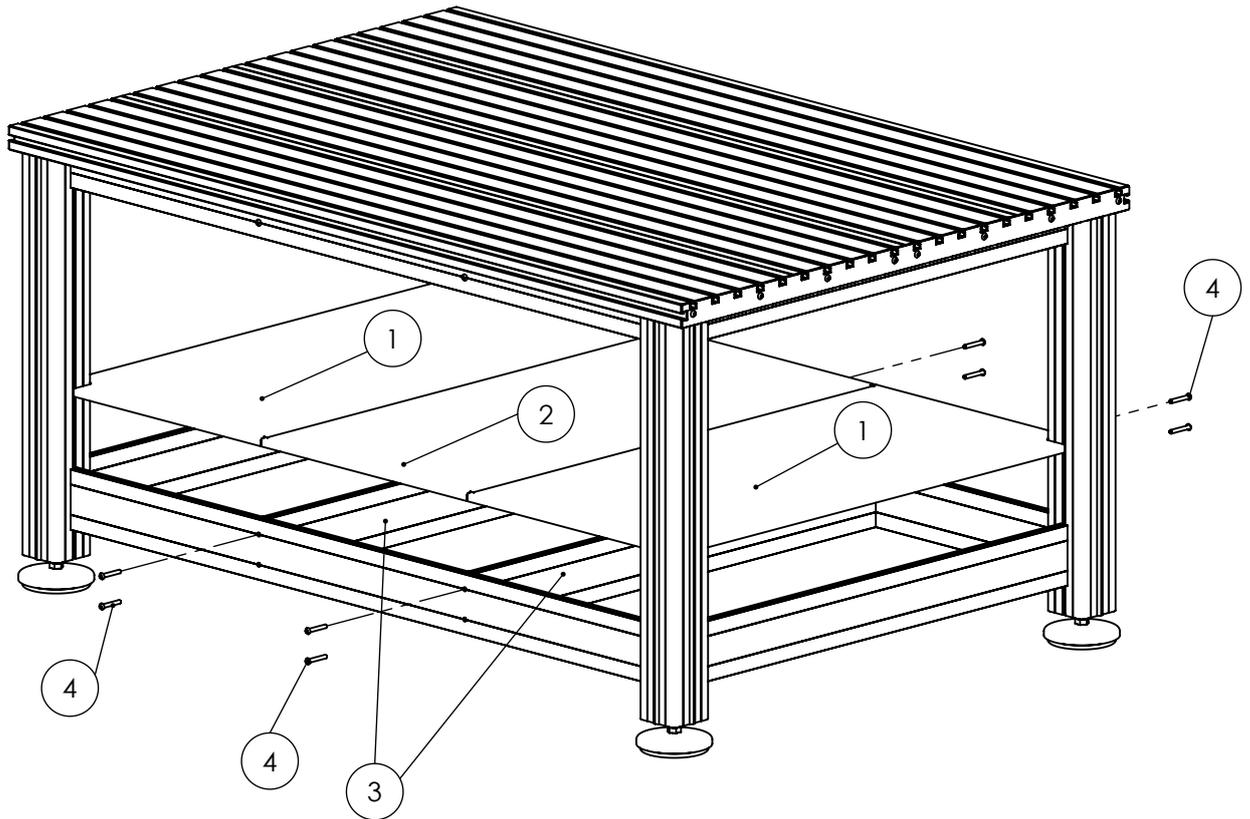


Pos. 1
2x Einlegeboden

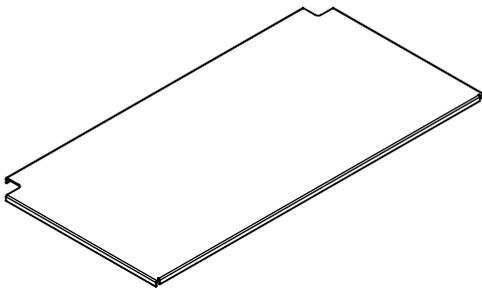


Pos. 2
1x Einlegeboden

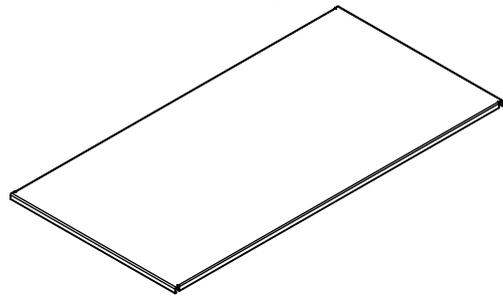



Pos. 3
2x PP100
L=894

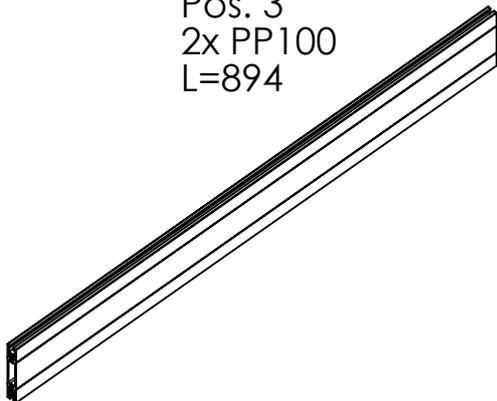


Pos. 4
8xDIN7380
M6x40

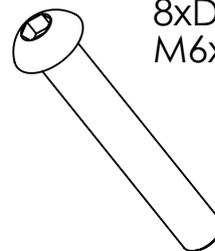


Option - Arbeitstisch AT3 mit Lenkrollen

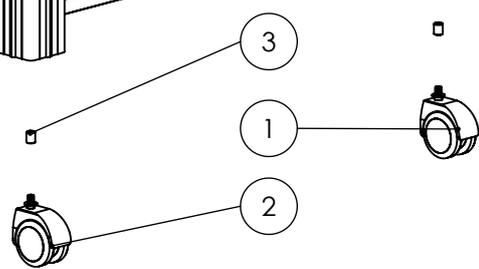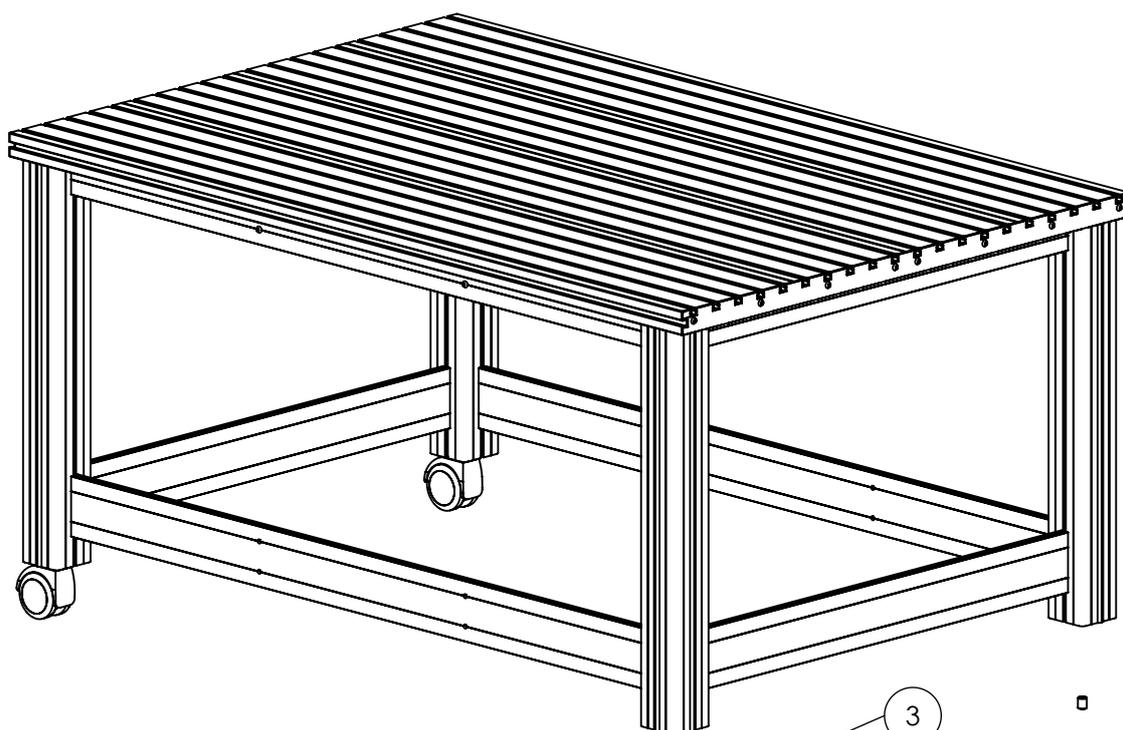

Pos. 1
2x Lenkrolle \varnothing 75
ohne Feststeller

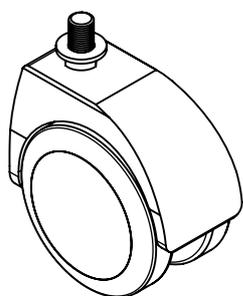

Pos. 2
2x Lenkrolle \varnothing 75
mit Feststeller

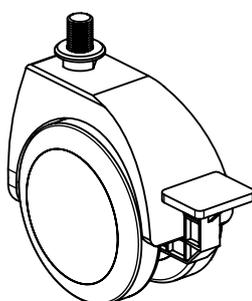

Pos. 3
4x Gewindebuchse
M14 - M10 - H18

